



Epson TM-T88II and TM-T88III USB Printer Windows XP Install

Before you connect your printer to the computer, you must execute the **ADT210E.exe** driver. This is an executable file that installs files on your hard drive. You must use this driver for these two (2) printers. If you install the newest driver the printers will not print correctly. The printer will hesitate and print slowly. Follow the steps outlined below to install this driver.

Installing the Driver for the Epson TM-T88II and TM-T88III Thermal Receipt Printer.

1. If you received a **Driver Resource CD** put the CD into your CD-ROM or CD-RW drive navigate to **Printers > Epson Printers > Epson TM-T88II & III > ADT210E.exe**. Double-click on the **ADT210.exe** and follow the prompts to complete the install process. If you downloaded the driver from our website double-click on the **ADT210.exe** on your desktop to start the install process.
2. The **Select OS** dialog screen appears, the default is **Windows XP** operating system, and **US** for Select Install Language. Accept the defaults click **Next**.
3. The **Select Module** dialog box appears put a check mark in **Status API, USB Printer** and select either the **Epson TM-T88II or TM-T88III Receipt** printer and also select the **Epson TM-T88II or TM-T88III Receipt Reduced** (You must select to install the Receipt Reduced for the driver to install correctly. After the driver is installed, you can remove the Receipt Reduced from your printers folder). Accept the default to **Overwrite file by version** click **Finish**.
4. You must restart you computer for the changes to take effect; click **YES**.

Connecting The Epson TM-T88II and TM-T88III Receipt Printer - USB Connection

You must connect the printer exactly as outlined for the printer to install correctly.

1. The computer and the printer must be **ON**. Plug the **USB** cable into the printer then into an available USB port on the computer. If the printer has been connected correctly, a pop-up screen will appear on the lower right-hand corner of the screen stating your new hardware has been installed and is ready to use. However, you must change the printer's communication port before you can print to this printer.

Changing the Printer's Communication Port

1. Go to **Start > Settings > Printers & Faxes**.
2. Right-click on the **Epson TM-T88III** listed in the printers folder and left-click on **Properties**.
3. Click on the **Ports Tab** to bring to the forefront.
4. Locate **ESD... USB** in the list and put a checkmark in the box to select. Click **OK** and close back to the desktop.

NOTE: If you don't see the port in the list then the driver was not installed correctly and you will need to remove the driver and reinstall.